


Model 107 up through 07.1985

123

126 up through 08.1985

201 up through 12.1984

## Special tools

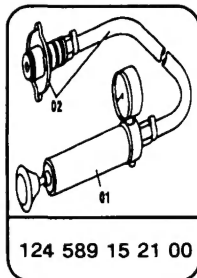

## Commercial tools

7 mm hex. socket wrench on flexible drive  
for worm drive hose clamps.

obtain locally

**Warning!** Perform leak test on **cold engine only!**

Check hoses for porosity, hardening, swelling, cracks or chafing marks and correct routing. Replace defective hoses.

- Apply pressure of 1.0 to 1.3 bar gauge to cooling system.
- Check all hoses and connections for leakage.
- Retighten hose clamps, if required.
- Replace corroded hose clamps.
- Replace a corroded radiator/expansion tank cap.

